SS-BX5/BX7/DX7/DX7B/ VX77/VX77B

SERVICE MANUAL

US Model
Canadian Model
SS-BX5/BX7
E Model
SS-DX7/DX7B/VX77/VX77B
Australian Model
SS-DX7

Photo : SS-BX5

- This set is the speaker system in MHC-BX5/BX7/DX7/DX7B/VX77/VX77B.

SPECIFICATIONS

Speaker system	3-way, 3-unit, bass-reflex type
Speaker units	
Super Woofer:	15 cm, cone type
Woofer:	15 cm, cone type (BX5,BX7,DX7,DX7B) 15 cm, hop type (VX7,VX77B)
Tweeter:	5 cm, cone type
Nominal impedance	6 Ω
Dimensions (w/h/d)	Approx. 250 × 360 × 360 mm (9 7 /8 ×14 1 /4 ×14 1 /4 in.)
Mass	Approx. 6.2 kg net per (BX5,BX7,DX7,DX7B) Approx. 7.1 kg net per (VX77,VX77B)

Design and specifications are subject to change without notice

SPEAKER SYSTEM

MICROFILM

SONY®

EXPLODED VIEW AND PARTS LIST

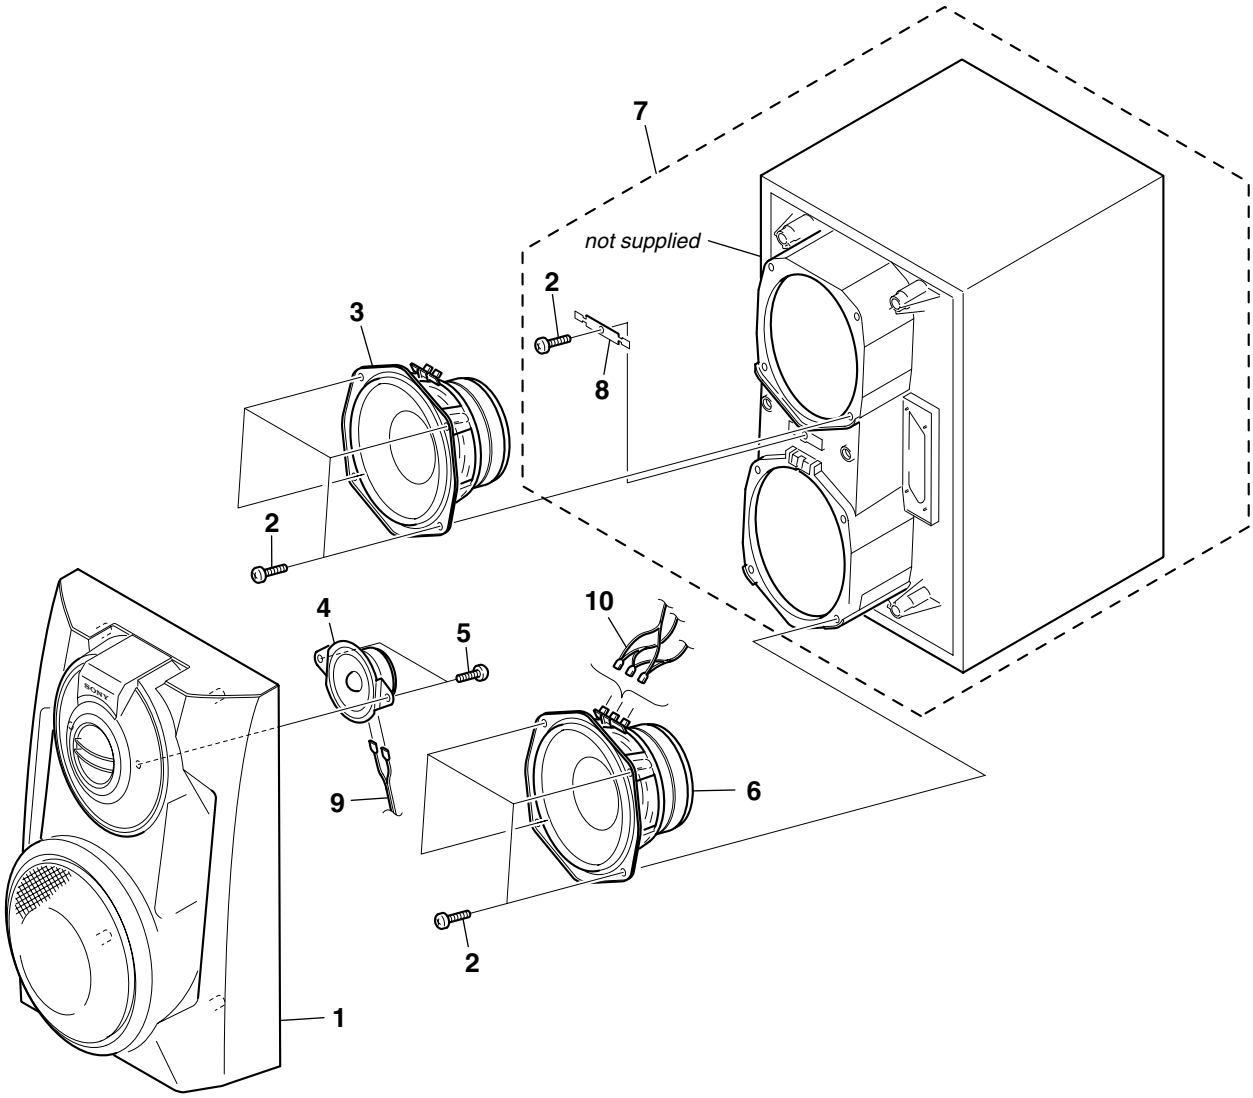

- Abbreviation

CND	: Canadian model.	AR	: Argentine model.
EA	: Saudi Arabia model.	TH	: Thai model.
MY	: Malaysia model.	AUS	: Australian model.
SP	: Singapore model.	IA	: Indonesian model.
MX	: Mexican model.	HK	: Hong Kong model.

Ref. No.	Part No.	Description	Remarks
1	A-4412-028-A	FRONT PANEL ASSY (DX7:EA)	
1	A-4412-029-A	FRONT PANEL ASSY (BX7/DX7:E,MY,SP,MX,AR, AUS/VX77:EXCEPT TH)	
1	A-4412-030-A	FRONT PANEL ASSY (BX5/DX7:TH/VX77:TH)	
1	A-4412-245-A	FRONT PANEL ASSY (DX7B/VX77B)	
2	4-874-614-01	SPEAKER (4)(3.5X14), TAPPING	
3	1-529-568-11	SPEAKER, LOUD (15cm)(BX5)	
3	1-529-629-11	SPEAKER, LOUD (15cm)(DX7/DX7B)	
3	1-529-630-11	SPEAKER, LOUD (15cm)(BX7)	
3	1-529-698-11	SPEAKER, LOUD (15cm)(VX7/VX77B)	
4	1-529-570-11	SPEAKER (5cm)(BX5)	
4	1-529-695-11	SPEAKER (5cm)(BX7/VX77/VX77B)	
4	1-529-696-11	SPEAKER (5cm)(DX7/DX7B)	
5	7-685-160-11	SCREW +P4X10 TYPE2 NON-SLIT	
6	1-529-569-11	SPEAKER, LOUD (15cm)(BX5)	
6	1-529-628-11	SPEAKER, LOUD (15cm)(BX7)	
6	1-529-631-11	SPEAKER, LOUD (15cm)(DX7/DX7B)	
6	1-529-697-11	SPEAKER, LOUD (15cm)(VX77/VX77B)	
7	A-4411-993-A	SPEAKER CABINET ASSY (BX5)	
7	A-4411-995-A	SPEAKER CABINET ASSY (BX7/DX7:EXCEPT TH /DX7B/VX77:EXCEPT TH/VX77B)	
7	A-4411-996-A	SPEAKER CABINET ASSY (DX7:TH/VX77:TH)	
8	1-694-650-11	TERMINAL	
9	1-792-512-21	CORD	
10	1-792-460-11	SPEAKER CORD	
**********			
		ACCESSORIES & PACKING	
		**********	
	1-775-512-21	CORD, SPEAKER CONNECTION	